



DECIBEL & SINCLAIR - ANTENNA MOUNTING DETAIL
(NOT TO SCALE)

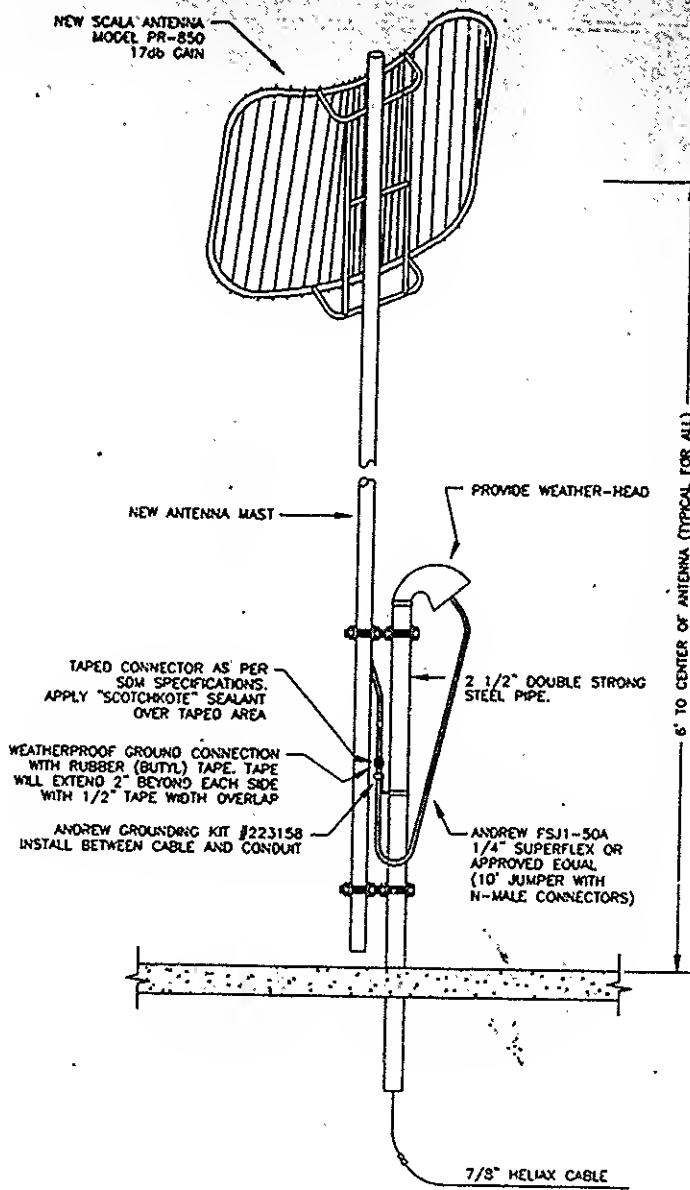

SCALA - ANTENNA MOUNTING DETAIL
(NOT TO SCALE)

NOTES

- 1) INSTALL SIX ANTENNAS AND CABLES AS SHOWN ON NEW ROOF MOUNTS.
- 2) FOLLOW MANUFACTURER'S INSTRUCTIONS FOR INSTALLATION OF ANTENNAS AND CABLES.
- 3) CABLE RUNS #2, 3, 4, 5, 6 & 7 SHALL BE 7/8" HELIAX CABLE, ANDREW INC. MODEL #LDFSRN-50A, OR APPROVED EQUAL.
- 4) CABLE RUNS #2, 3, 4, 5, 6 & 7 LEAVE TEN (10) FEET SLACK ON THE ROOF FOR CONNECTIONS TO THE NEW ANTENNAS.
- 5) SEAL ALL WALL PENETRATIONS WITH FIRESTOP SEALING COMPOUND AS APPROVED BY THE ENGINEER.
- 6) CONTRACTOR SHALL REMOVE THE EXISTING MASTS AND ANTENNAS AFTER CUTOVER TO THE NEW SYSTEM.
- 7) FINAL CONNECTION AND ALIGNMENT OF ANTENNA BY OTHERS (P.A. RADIO SHOP).

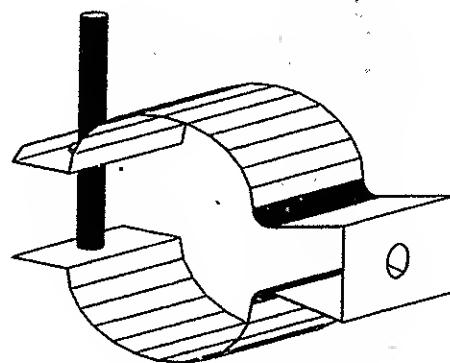


HANGER 'B'

CABLE SIZE	MAXIMUM SPACING	HANGER REFERENCE	MANUFACTURER	TYPE NUMBER
7/8"	6 ft	B	ANDREW CORP. OR EQUAL	42298A-5

1. PROVIDE HELIAX CABLE HANGER SUPPORT AS PER TABLE ABOVE. SUPPORT SPACING SHALL BE MAXIMUM OF 6 FEET APART.
2. SECURE THE HANGER TO THE STEEL DECK ABOVE VIA EXPANSION ANCHORS OR EXISTING STEEL BEAMS VIA UNIVERSAL CLAMPS.
3. SECURE THE HANGER TO THE GYPSUM BOARD WALL VIA SHEETROCK SCREWS OR UNISTRUT FOR MULTIPLE CABLES.

MOUNTING DETAIL FOR HELIAX CABLE
(NTS)

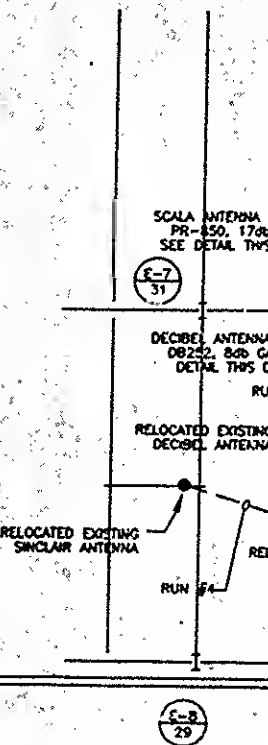

FIELD VERIFY THE ANTENNA LOCATIONS ON THE ROOF TO BE CLEAR OF DUCTS OR OTHER EQUIPMENT BELOW THE ROOF.

7/8" DIA. CABLES DOWN TO RADIO EQUIPMENT ROOM

PARTIAL ROOF

SCALE IN FEET